

Instruction for installation

Chimney cap Rotowent Dragon

During the installation on the roof take care of safety instructions, which are applied on this type of work. It is recommended to entrust the installation to professionally trained specialist.

All the chimney caps Rotowent Dragon are ideal for outcomes of fireplaces and boilers for the wood and solid fuels.

The procedure for the installation of the Rotowent Dragon with hinged base:

- 1) Choose the design of the wing which you want to install into the head
- 2) The selected wing insert into the prepared grooves with tips in the down direction
- 3) Put the tips exactly into prepared holes
- 4) Bend the tips whose are overlaped into inner part of the head, each on the opposite site
- 5) The right installation of the wing can be recognized by griping of the wing. If the wing is not moving in the grooves, installation is right.
- 6) Put the chimney cup on the chimney board
- 7) Put on the squared basement a water level and check if is the turbine in horizontal level
- 8) Centre the hole in the head and the hole in the chimney
- 9) Mark position of the holes, which you will later drilled on the chimney board by pencil e.g.
- 10) Drill the holes for the wall plugs diameter 6mm into the board of the chimney
- 11) Put the chimney cap again on the chimney board and screw it by a four screws into prepared wall plugs
- 12) Spin the cap to check its regular functioning

The procedure for the installation of the Rotowent Dragon with hinged neck:

- 1) Choose the design of the wing which you want to install into the head
- 2) The selcted wing insert into prepared grooves with tips in the down the direction
- 3) Put the tips exactly into prepared holes
- 4) Bend the tips whose are overlaped into inner part of the head, each on the opposite site
- 5) The right installation of the wing can be recognized by griping of the wing. If the wing is not moving in the grooves, installation is right
- 6) Drill the 4 holes approximately 3 cm from the lower edge of the neck
- 7) Put the cap on the output of the chimney and mark the position of the holes, which will be later drilled
- 8) Put the cap on the chimney output after drilling of the holes. Centre the hole in the cap and the hole in the chimney and screw it by four screws into the sheet, then rivet it.
- 9) To avoid damage of the bearing take care to the cap was in horizontal level
- 10) Spin the cap to check its regular functioning

The turbine as a conductive component or the metal pipe under the turbine has to be grounded according the Standart.

General instructions when taking apart the wing: During the removing of the wing act in the reverse way than during the instalation. Already instaled wind don't instal again.

General instruction when taking the turbine apart: During the removing of the turbine act in the reverse way than during the installation. Take the turbine down the roof and liquidate it according bellow mentioned instructions.

Liquidation of the product and package: The staineless steel product, including the paper package, place into the eco collection center.

Producer: Darco Sp. Zo.o, Osiedle 48, 39-206 Pustków, Poland

Exclusive distributor for Czech Republic and Slovakia:

ABC American Bohemian Corporation s.r.o.

Ledárenská 57, 620 00 Brno, CZ, www.abcweb.cz, export@abcweb.cz